


# vCamMX-2

## Quick Guide V1.0

### vCamMX-2 Playback Controls, Camera Lights and On-screen Keyboard

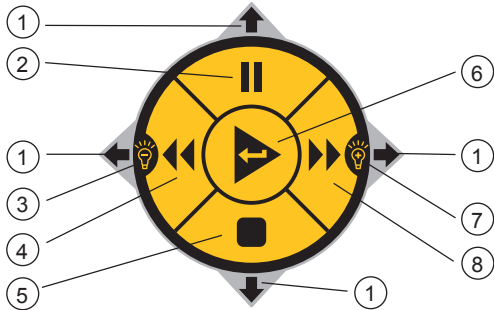

1	<b>Keyboard Navigation</b>	While the file rename dialog box is on the screen, use the buttons corresponding to the top, right, bottom and left arrows to navigate through the on-screen keyboard. Navigate to and press the next key on the on-screen keyboard to save the changes.
2	<b>Pause and Resume</b>	Use this button while recording or playing a video to pause and resume the video.
3	<b>Lower Camera Lights</b>	Lower the camera lights while viewing or recording.
4	<b>Rewind</b>	Rewind the video during playback.
5	<b>Stop</b>	Stop the recording or playing video.
6	<b>Enter Button</b>	Press while in File Manager to play a selected video.
7	<b>Raise Camera Lights</b>	Increase or lower the camera lights while viewing or recording.
8	<b>Fast Forward</b>	Fast forward through the playing video.

### Control Box Buttons

	<b>On/Off Button</b>	Press and release to turn the unit on. When on this button will glow green. Press and hold to turn the unit off.
	<b>Distance reset</b>	Pressing this button will reset the distance counter to zero. A message will appear top center screen confirming that the counter has been reset.
	<b>Distance reset</b>	Press this button to turn the internal microphone on and off. When on, the button will glow red and the microphone icon will be shown in the status bar. Stand between one and three feet/1m of the screen and speak facing the screen. The internal microphone is located top center above the screen.
	<b>Sonde</b>	Pressing this button will activate and de-activate the sonde. With each press of the button the sonde frequency will change. After cycling through the frequencies, the sonde will turn off. When active, the button will glow green and the sonde frequency will appear in the status bar.
	<b>Record</b>	Press this button to start a recording. When active the button will glow red and the record icon will appear in the status bar. Press this button again to end the recording.
	<b>Picture</b>	Press this button to take a JPEG picture. When pressed a message will appear top center screen to confirm that the picture capture was successful.
	<b>Zoom</b>	Press this button to enter the digital zoom mode. One press will zoom x 2, press again to zoom x 3, and press again to exit the zoom mode. The level of zoom will be shown in the status bar.

	<p>While viewing or Recording: Use the Left/Right Arrow section to increase or lower the camera lights. Use the Pause/Resume button while recording or playing a video to pause and resume the video.</p> <p>To re-name a file: Use these buttons to navigate the on-screen keyboard which appears when a recording is stopped. Use the center Enter button to select the letters to name the file.</p> <p>While playing a video: Use these buttons to Pause, Forward Fast, Stop and Rewind the video playing.</p>
--	--

### LCD Keypad Buttons

	<b>Step Back / ESC</b>	Press this key to go back to the previous screen or to exit an operation.
	<b>Karat choice keys</b>	Press these keys to make a selection while in various menus.
	<b>Enter</b>	Press this key when required to complete an action. Press this key to hide and show the main menu bar while viewing and recording.

### Make a Video Recording or JPEG Picture

	Press this button to start a recording. The button will glow red and the record icon will appear in the status bar while recording. Press this button to stop the recording.
	Press this button to take a JPEG picture. When pressed a message will appear top center screen to confirm that the picture capture was successful.

### Main On-Screen Menu

	Press this key to enter the File Manager to manage video and picture files.
	Press this key to access the LCD's backlight, brightness, contrast Hue and Saturation settings.
	Press this key to change the colors and position of the date, distance and time shown on the screen.
	Use this key to adjust the camera lights.
	Use this key to enter the systems regional, storage, features, system and wi-fi settings.

	Copy - Select the Copy key. Select the copy destination, SD or USB.
	Delete - Press the Delete key.

**Vivax-Metrotech Corp. (Headquarters)**  
3251 Olcott Street, Santa Clara, CA 95054, USA

T/Free: 800-446-3392  
Tel: +1-408-734-1400  
Fax: +1-408-734-1415  
Email: sales@vxmt.com  
Website: www.vivax-metrotech.com

**Vivax-Metrotech Ltd. (UK)**  
Unit 18-19, Woodside Road, South Marston Industrial Estate, Swindon, SN3 4WA, UK


Free Phone: 0800 0281811  
Tel: +44(0)1793 822679  
Email: salesUK@vxmt.com

**Vivax Canada Inc. (Canada)**  
41 Courtland Ave Unit 6, Vaughan, ON L4K 3T3, Canada

Tel: +1-289-846-3010  
Fax: +1-905-752-0214  
Email: CanadianSales@vxmt.com

Please visit [www.vxmt.com](http://www.vxmt.com) for other locations.

### vCamMX-2 File Manager Screen

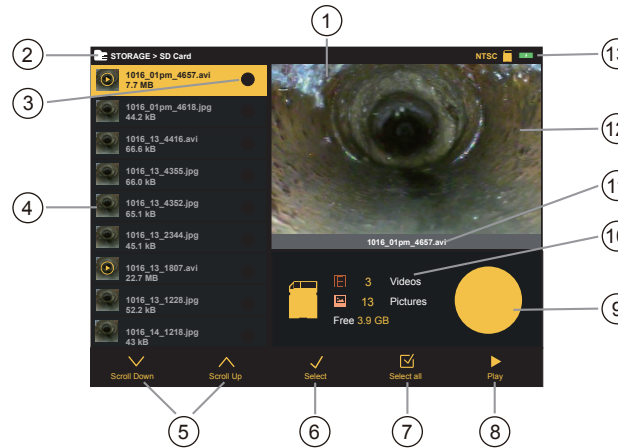

1	Status bar
2	Menu and sub-menu location
3	File(s) select status
4	File list
5	Scroll keys
6	Select file(s) key
7	Select all files key (Copy keys*)
8	Play key (Delete keys*)
9	Graph showing the used and free space remaining of the USB drive or SD card
10	SD Card/USB drive information
11	Active file name
12	Preview window
13	System information

**Note:** \*When more than one file is selected the Select All and Play keys are replaced by Copy and Delete keys.

### Playing, Copying and Deleting Files

	Press the File Manager key to enter the file manager.
	Choose the drive where the file is located, SD or USB.
	Use the Up/Down Scroll keys to highlight the desired file.
	Play - Press the Play key to play the file.
	Press the Select key to individual files or press Select All to select all of the files.